 



## **1. CONTENTS**

1. CONTENTS .....	1
2. CARE AND SAFETY ADVICE .....	3
3. PREPARING .....	5
3.1 REMOTE CONTROL .....	5
3.2 CONNECTIONS .....	5
3.2.1 CONNECTION TO THE TV .....	5
3.2.2 CONNECTION TO A VCR .....	6
4. REMOTE CONTROL FUNCTIONS .....	6
4.1 REMOTE CONTROL LAYOUT .....	7
5. MENU INTERFACE .....	9
FIRST TIME INSTALLATION: .....	9
5.1 MAIN MENU : .....	9
5.1.1 CHANNEL LIST : .....	9
5.1.2 NAVIGATING THE WHOLE LIST OF CHANNELS : .....	10
5.1.3 DELETING UNWANTED CHANNEL : .....	10
5.1.4 RENAMING CHANNELS : .....	10
5.1.5 ADDING LOCKS TO CHANNELS : .....	10
5.1.6 SETTING FAVOURITES : .....	10
5.2 FAVOURITES .....	10
5.3 TIMERS MENU : .....	11
5.3.1 EVENT TIMER .....	12
5.4 SETTINGS .....	12
5.4.1 CONFIGURATION .....	12
5.4.1.1 SUBTITLE .....	13
5.4.1.2 TV TYPE .....	13
5.4.1.3 TV OUT .....	13
5.4.1.4 FAVOURITE MODE .....	13
5.4.1.5 CHANNEL LIST : .....	13
5.4.1.6 RECEIVER UPGRADE - OAD .....	13
5.4.1.7 PARENTAL SETTINGS : .....	14
5.4.1.7.i Menu Lock .....	14
5.4.1.7.ii Set Lock Key .....	14
5.4.2 LANGUAGE .....	14
5.4.3 INSTALLATION .....	15
5.4.3.1 AUTOMATIC SEARCH: .....	15
5.4.3.2 MANUAL SEARCH: .....	15
5.4.3.3 FIRST TIME INSTALLATION: .....	16
6.1 ELECTRONIC PROGRAM GUIDE (7- DAY - EPG) : .....	16
6.2 MESSAGES : .....	17
6.3 CHANNEL NAVIGATION : .....	17
6.4 VOLUME CONTROL : .....	18
6.5 DIGITAL TELETXT .....	18
7. TROUBLE SHOOTING GUIDE .....	18
8. TECHNICAL SPECIFICATIONS .....	19
8.1 GENERAL .....	19
8.2 REMOTE CONTROL .....	19
8.3 TV SCART .....	19
8.4 TV SCART SOCKET .....	19
8.5 VCR SCART SOCKET .....	19
8.6 HARDWARE CONFIGURATION .....	20
8.7 WEEE .....	20

**FRONT PANEL:**

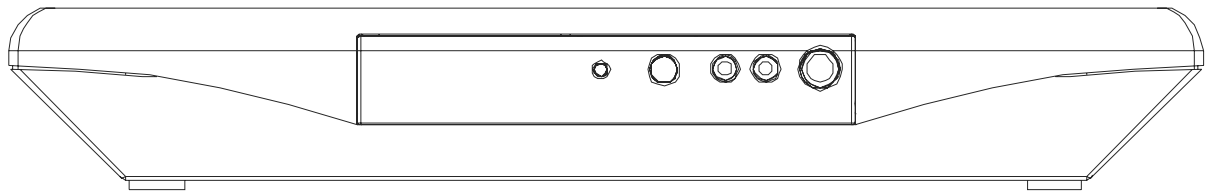

 **REAR PANEL:**

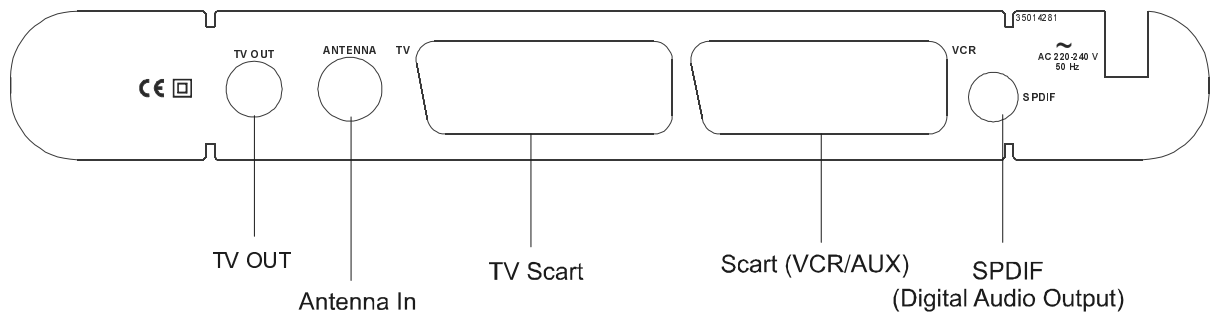

## **2. CARE AND SAFETY ADVICE**

This Digital Box has been manufactured to meet international safety standards, but you must take care to operate it safely. **It is important that you read these safety instructions.** If you have any doubts about the installation, operation or safety of this Digital Box, contact us, as shown below.

### **Electrical warning**

- Your Digital Box power supply contains a high voltage which is sufficient to cause a dangerous electric shock.
- Never remove the Digital Box cover or attempt to open the power supply. There are no user – serviceable parts inside.
- The Digital Box power supply is a sealed unit and the fuse is not changeable. Only use the power supply supplied (or manufacturer’s replacement) with your Digital Box.
- Switch off the power supply from the mains wall socket before you disconnect any equipment from the Digital Box.
- Never push anything into holes, slots or other openings in the case.

### **Positioning the box**

- The Digital Box and cables should be placed so that they are not likely to be walked on or pinched by items placed upon or against them.
- Do not expose your Digital Box to direct sunlight or to extreme temperatures (above 40 or below -5 C), high moisture levels or dust.
- Condensation may accumulate on the Digital Box if it is subjected to sudden changes in temperature. In this case, allow the Digital Box to rest for one hour before use.
- Do not block the ventilation holes of the Digital Box. Allow at least 10 cm on all sides of the Digital Box (including the top, but excluding the base) for ventilation.
- Do not place the Digital Box on an unstable surface or on a bed, sofa, rug, or similar surface as this may block air ventilation and cause it to overheat. Never place the Digital Box over a radiator or in an unventilated cabinet.

### **Cleaning**

- Cleaning: always disconnect from the mains supply before cleaning. Wipe with a lint-free cloth or one that has been slightly dampened with clean water. Never use detergents, liquid cleaners or aerosol cleaners.

### **Unplug when not in use**

- When not in use for an extended period, unplug the Digital Box from the mains outlet. Do not overload wall outlets and extensions adaptors as this can result in a risk of fire or electric shock.

### **Use only authorised servicing**

#### **If any of the following occur**

- Any of the cables or plugs are damaged.
- Liquids has spilled onto, or objects have fallen into, the Digital Box.
- The Digital Box has been dropped or the casing has been damaged.
- The Digital Box does not operate normally.

#### **Carefully unplug the Digital Box from the electrical outlet and**





- Contact the retailer/ supplier who sold you the Digital Box
- Please contact our Digital Helpline on 0870 100 484 – lines open Monday to Friday 8: 30 am to 8:00 pm, Saturday 9 am – 6 pm, Sunday 9 am – 5:30 (calls charged at the national rate.)

## SCREEN BURN

A characteristic of Plasma and LCD TV panels is that displaying the same image for a long time may cause a permanent after-image to remain on the screen. This is called screen burn. Most pictures will be constantly moving however avoid leaving still pictures eg; menus and radio stations, on the screen for long periods of time.

### **CAUTION**

**Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.**

	<table border="1"><tr><td><b>WARNING</b></td></tr><tr><td><b>DO NOT OPEN</b></td></tr><tr><td><b>RISK OF ELECTRIC SHOCK</b></td></tr></table>	<b>WARNING</b>	<b>DO NOT OPEN</b>	<b>RISK OF ELECTRIC SHOCK</b>	
<b>WARNING</b>					
<b>DO NOT OPEN</b>					
<b>RISK OF ELECTRIC SHOCK</b>					
	<p><i>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</i></p>				
	<p><i>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</i></p>				

CE

## **3. PREPARING**

### **3.1 REMOTE CONTROL**

First open the battery cover on the underside of the remote control. Put in both batteries 1.5Volt (RO3/AAA) referring to the imprinted symbols (+/-) in the battery case and put on the battery cover again.

 
While using the remote control, direct it towards the front side of the receiver. If the remote control does not work or the chosen function does not work, the batteries are most probably exhausted and they should be replaced as soon as possible. Please use only the leak proof batteries. It is best to remove the batteries from the remote unit if you will not be using the remote control unit for long time.

### **3.2 CONNECTIONS**

Make sure your TV and the set-top box are unplugged from the mains whilst making connections.


#### **3.2.1 CONNECTION TO THE TV**


Connect your set-top box with a scart cable using the TV scart socket on the rear of your set-top box. The set-top box gives RGB or CVBS output. If your TV's scart connector has an RGB input then you can switch your digital set-top to RGB mode by toggling TV out menu to RGB mode in configuration menu, so you will be able to achieve high performance from your digital set-top box.

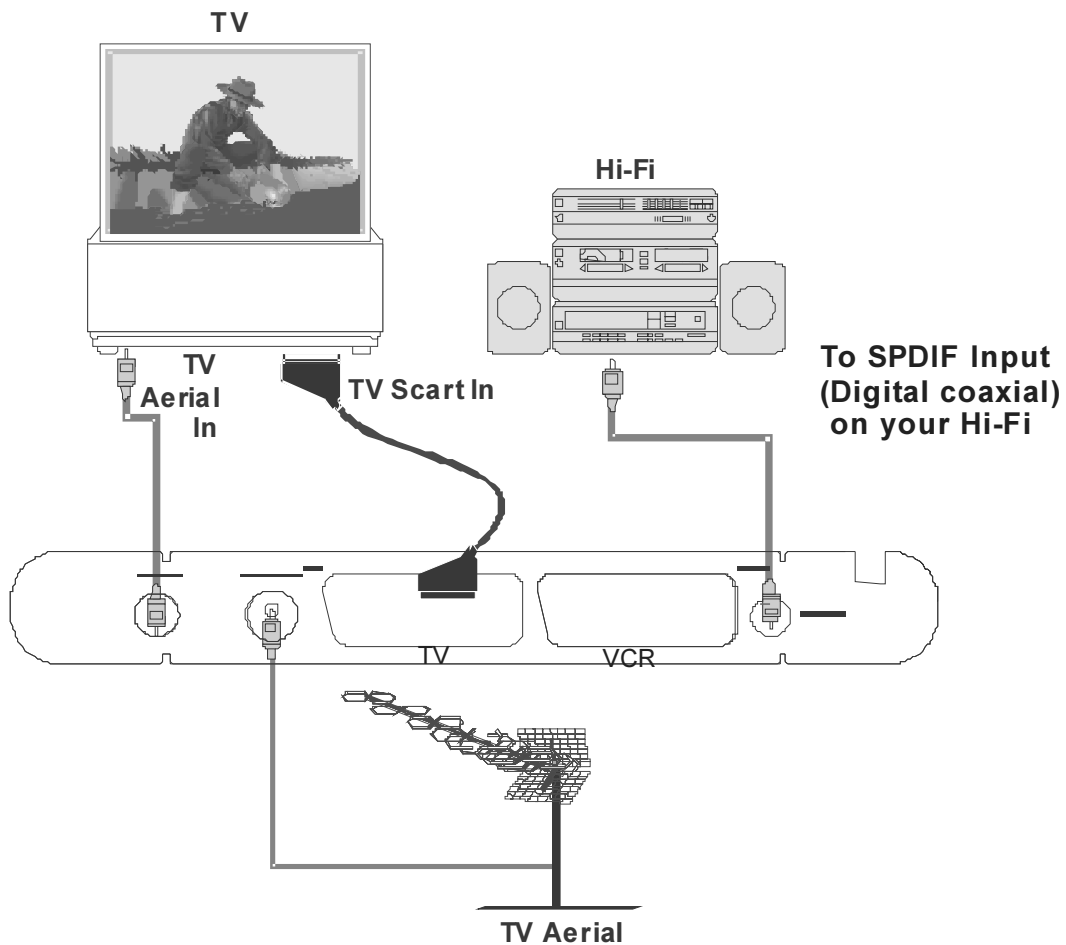

### **3.2.2 CONNECTION TO A VCR**


- 1) Connect one end of Scart cable to TV Scart connector on the set-top box and the other end of to a Scart connector on your TV
- 2) Connect one end of Scart cable to VCR Scart connector on the set-top box and the other end of to a Scart connector on your VCR.

 Your TV should switch to the set-top box automatically. If not, select the AV channel using the button on your TV remote marked AV, EXT, TV/AV, D/V OR a  symbol, or refer to your TV manual.  
If you can not see the picture from the set-top box, refer to the Trouble Shooting section towards end of this guide.

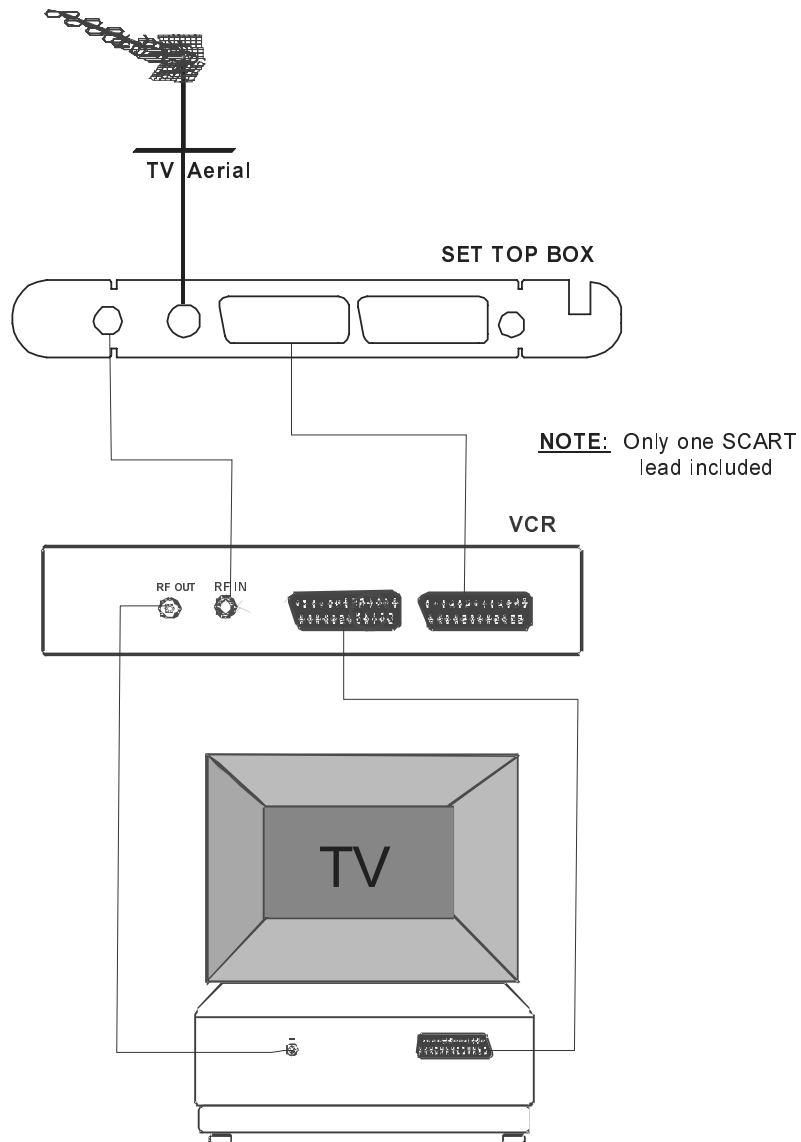

# 4. REMOTE CONTROL FUNCTIONS
 
## 4.1 REMOTE CONTROL LAYOUT

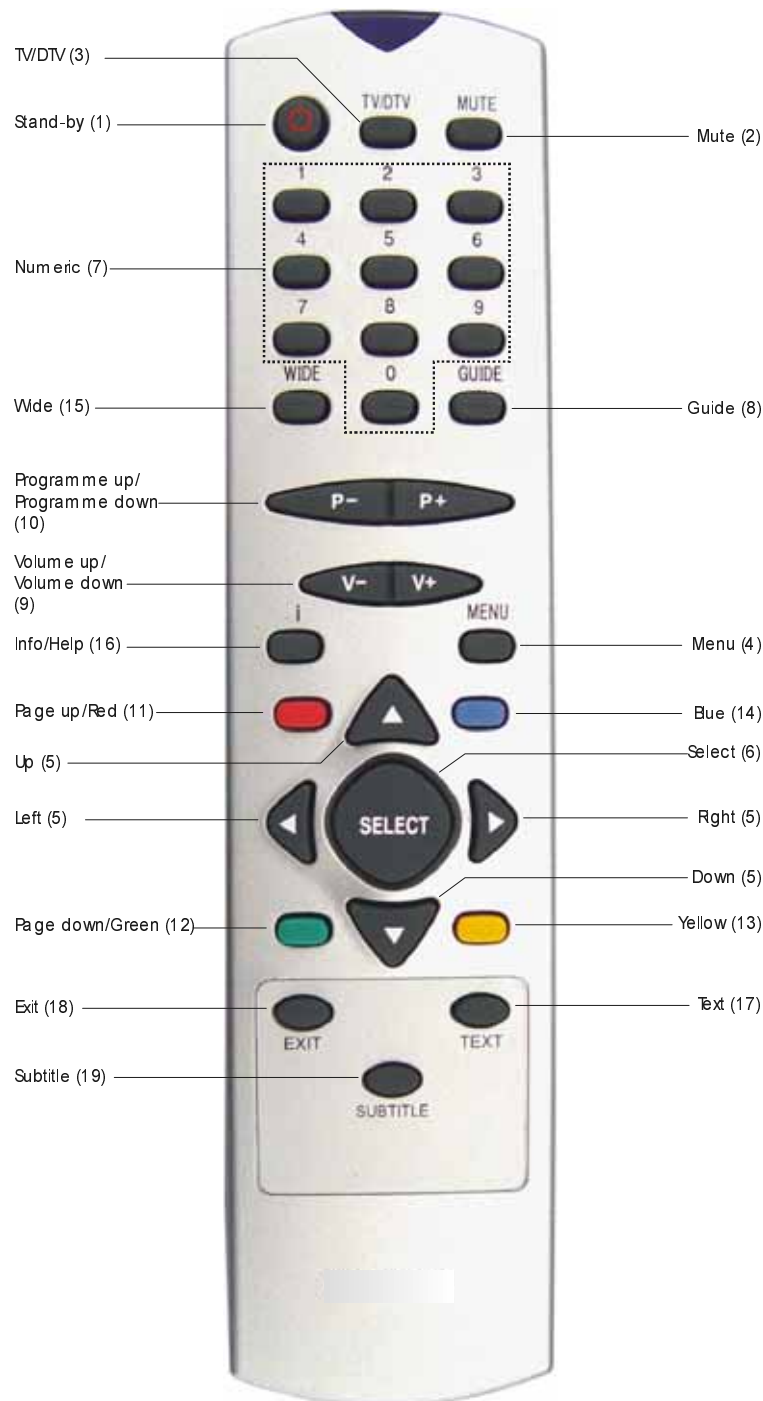



<b>Button</b>	<b>Function</b>
1	<b>Standby</b> Turn the receiver on and into Standby
2	<b>Mute</b> Silence received audio
3	<b>TV/DTV</b> Exit most menus to return to television viewing Switch the TV set between analogue, digital TV and VCR
4	<b>Menu</b> Display the Main Menu. Exits menus
5	<b>Up, Down, Left, Right</b> Move between menu items
6	<b>Select</b> Make selection in a menu
7	<b>Number keys</b> Change channels Enter PIN code Enter numbers and letters into menus
8	<b>Guide</b> Display and exit electronic programme guide
9	<b>V+, V-</b> Adjust the received audio volume
10	<b>P+, P-</b> Change channels
11	<b>Page Up/Red</b> Move up a page through channel list Move to top in EPG programme details Select red option in digital teletext
12	<b>Page Down/Green</b> Move down a page through channel list Select green option in digital teletext Move to bottom in EPG programme details
13	<b>Yellow</b> Scroll up through EPG programme details Select yellow option in digital teletext
14	<b>Blue</b> Scroll down through EPG programme details Select blue option in digital teletext
15	<b>Wide</b> Select screen format
16	<b>i</b> Display menu help
17	<b>Text</b> Start and stop digital teletext
18	<b>Exit</b> Return to Exit from menu
19.	<b>Subtitle</b> Turn Subtitles ON and OFF



# 5. MENU INTERFACE
  
## FIRST TIME INSTALLATION:

When the box is opened from stand-by mode and if there is no channel stored in the database, First Time Installation Menu window is displayed on the screen. In the first window, you have to set your TV type.

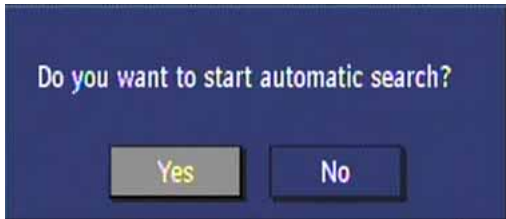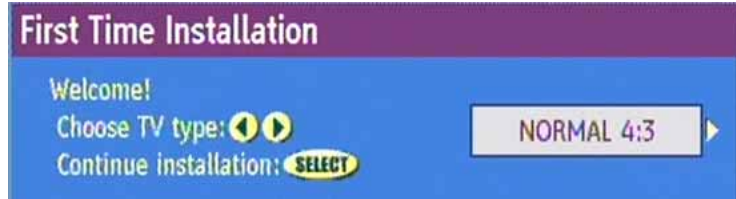

If you press SELECT then “Do you want to start automatic search?” pop-up menu is displayed. Auto search can be started by selecting “Yes” button. The box will automatically find the channels and store them for you.

## 5.1 MAIN MENU :

The Main Menu is accessed, pressing the MENU key. The items accessed through the Main Menu are:

- 1.) Channel List
- 2.) Favourites
- 3.) Timers
- 4.) Settings



### 5.1.1 CHANNEL LIST :

The following operations can be performed in this menu:

- 1. Navigating the whole list of channels
- 2. Deleting unwanted channels
- 3. Renaming channels
- 4. Adding locks to channels
- 5. Setting the favorite list

Channel table is the place where the channels are managed.

### **5.1.2 NAVIGATING THE WHOLE LIST OF CHANNELS :**

In the channel table “▲/▼” serves for moving the focus to the previous or next channel, LIST RED BUTTON / GREEN SUBTITLE BUTTON for page up and page down.

To watch a specific channel highlight it using, LIST RED BUTTON / GREEN SUBTITLE BUTTON then press SELECT key while the "SELECT" button is highlighted. Then the name and number of the selected channel will be displayed in the top-right corner of the screen. If the selected channel is password protected then a pop up menu is displayed. If the correct code is entered then the selected channel can be watched. Also you can select another channel by navigating with “▲/▼” keys.

The scroll Bar in middle of the screen shows relative position of the currently visible channels with respect to the whole list.

### **5.1.3 DELETING UNWANTED CHANNEL :**

To delete a channel highlight it using “▲/▼” RED/GREEN, then highlight the “Delete” button using “◀/▶” and press SELECT. A message is displayed to confirm your decision, if you still want to delete press SELECT once more and the channel will be deleted, else the operation will be cancelled if you select “NO”.

### **5.1.4 RENAMING CHANNELS :**

To rename a specific channel, the name must be highlighted and then select the "Edit Name" button and SELECT key must be pressed. The name appears on the right side of the menu with the first character highlighted. Now “◀/▶” moves to the previous/next character. “▲/▼” toggles the current character, i.e., ‘b’ character becomes ‘a’ on “▼” and ‘c’ on “▲”. Pressing the numeric buttons ‘0...9’ replaces the highlighted character with the characters printed above the button one by one as the button is pressed. Pressing MENU cancels the editing and SELECT saves the new name.

### **5.1.5 ADDING LOCKS TO CHANNELS :**

Channel Locking provides a password-protected access to channels selected by parents. In order to lock a channel you should know the parental Lock password (set to 0000 in the factory and can only be changed from the Configuration Menu), highlight the channel to be locked and select the “Lock” button, when SELECT is pressed a password dialog is displayed. Enter the parental Lock code, press SELECT and the Lock icon will be displayed in front of the selected channel. Repeat the same operation to cancel the Lock.

### **5.1.6 SETTING FAVOURITES :**

In channel list highlight “Favourites” by pressing “◀/▶” keys then press SELECT. The unit will automatically switch to menu “Edit Favourite List” in the Main menu. For detailed explanation see “Favourites”

## **5.2 FAVOURITES**

Favourite lists provide an easy way to group programs in a customizable way. Five favourite lists are available on this product named as List1, List2, List3, List4 and List5.

1. To access the “favourite menu” press MENU then use “▲/▼” buttons to highlight favourites and press SELECT to enter the “Edit favourite Lists” menu.
2. Press SELECT to add the highlighted programme to your list and continue to add the programmes you want included in your favourites.
3. Once complete press MENU to save your settings.



**Now, to access your favourites follow the steps below:**

1. Press MENU button.
2. Press “▲/▼” buttons to highlight “settings” and press SELECT to enter.
3. Press SELECT again to enter the Configuration menu.
4. Use the “▲/▼” to highlight “Favourite Mode” and press the “◀/▶” buttons to select your preferred favourite list (e.g. OFF/ List1/List2/ List3/List4/ List5).
5. Press menu to exit.
6. Now when you press the P-/P+ buttons only the programmes selected in your favourites list will appear on the screen.

**5.3 TIMERS MENU :**

 
Timer Menu is entered from the Main Menu. There is a five column summary information, such as timer no, channel name, start time, end time, start date and mode, for each of the five timers.



There are two ways in which the Timer can be set.

**Method 1** (Access via main Menu)

1. Press MENU
2. Press “▲/▼” to highlight “Timers”.
3. Press SELECT, the “Programme Timers” menu will appear. This will enable you automatically program five events.
4. Press SELECT and the following menu will appear:
5. Press the “▲/▼” buttons to scroll up and down this list and “◀/▶” and the number buttons (0-9) to change the settings to your preference.
6. Press SELECT to confirm your settings and then MENU to exit.

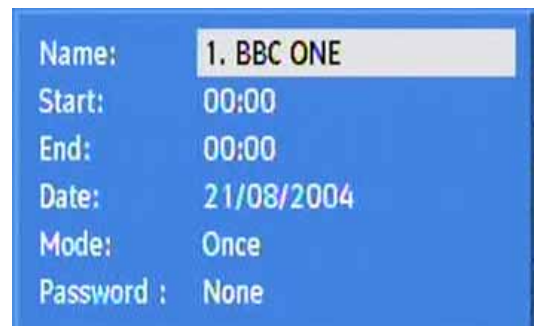

**Method 2** (Access via the EPG (Electronic Program Guide))

1. Press GUIDE, the EPG will appear.
2. Use the “▲/▼, ◀/▶ YELLOW/BLUE/RED/GREEN buttons to move forward/backward in days and time.
3. Once you have chosen the programme you wish to record press SELECT. A Timer ⌚ symbol will appear next to your chosen programme.
4. To exit press MENU.


### 5.3.1 EVENT TIMER

If your set-top box is connected to a VCR/DVDR using a SCART lead it can be programmed to allow you to record your favourite programme.

To do this follow the instructions below:

1. Turn on your set-top box.
2. Press MENU.
3. Press “▲/▼” to highlight “Timer”.
4. Press SELECT to enter the “Programme Timer” menu.
5. Set the Timer for the programmes you wish to record. (see 5.3 Timer menu for instructions on setting the Timer).

**NOTE:** Up to five events can be programmed.

6. Press SELECT to confirm your Timer settings and MENU to exit.
7. Press  STAND BY button on the remote control to put your set-top box into Standby.

**NOTE:** When the first event programmed into the Timer is reached, the set-top box will produce the signal via the VCR SCART socket (which should be plugged into your recording device eg. VCR). You will need to make sure your VCR/DVDR is set to the AV input channel and programmed to record at the same time as the set-top box.

### 5.4 SETTINGS

The submenus in the Settings are:

- Configuration
- Language
- Installation



#### 5.4.1 CONFIGURATION

You can configure the settings of your box. Select Configuration from Settings Menu and Press **SELECT** to enter this menu. Press **MENU** button to exit. Configuration Menu includes the following main items:

- Subtitle
- TV Type
- TV Out
- Favourite Mode
- Channel List
- Receiver Upgrade
- Parental Settings.



### **5.4.1.1 SUBTITLE**

Digital terrestrial television channels can broadcast with subtitles displayed on-screen for the hard-of-hearing. This function selects the desired subtitle language and enables the automatic display of subtitles whenever subtitle information is broadcast.

Highlight the Subtitle line in the Configuration menu and use the [LEFT] or [RIGHT] keys to cycle through the disable and language options. Return NO MENU to normal TV viewing by pressing the [MENU] key.

### **5.4.1.2 TV TYPE**

Digital terrestrial television channels can broadcast programmes in a widescreen format which must be output differently to normal and widescreen TV sets. This function tells the receiver the screen format of the TV connected so that broadcasts are displayed correctly. Highlight the TV Type line in the Configuration menu and use the [LEFT] or [RIGHT] keys to select 4:3 if you have a standard TV set connected or 16:9 if it is a widescreen TV. This function duplicates the selection made at the time of first installation and can be used if you change TV sets. Return NO MENU to normal TV viewing by pressing the [MENU] key.

### **5.4.1.3 TV OUT**

The receiver can output either an RGB or CVBS signal from the TV SCART on the rear panel. Although the RGB format results in a better quality picture, not all equipment - particularly some VCRs - can cope with an RGB signal.

### **5.4.1.4 FAVOURITE MODE**

 
This function enables or disables the 5 favourite channel list mode by pressing “◀ / ▶” buttons.

### **5.4.1.5 CHANNEL LIST :**

Use “▲ / ▼” buttons to go to Channel List option. Use “◀ / ▶” buttons to toggle Channel List Mode. If you select "TV Only", only the TV channels are listed in Channel List. If you select "Radio Only", only the Radio channels are listed in Channel List. If you select "Text Only", only the Text channels are listed in Channel List. To save the recent changes press SELECT button.

### **5.4.1.6 RECEIVER UPGRADE - OAD**


In Configuration menu with the “▲ / ▼” keys Receiver Upgrade is highlighted and with SELECT, it is activated. With OAD (Over-Air -Download) you can upgrade your unit. Also you can see the version of the software in your receiver.

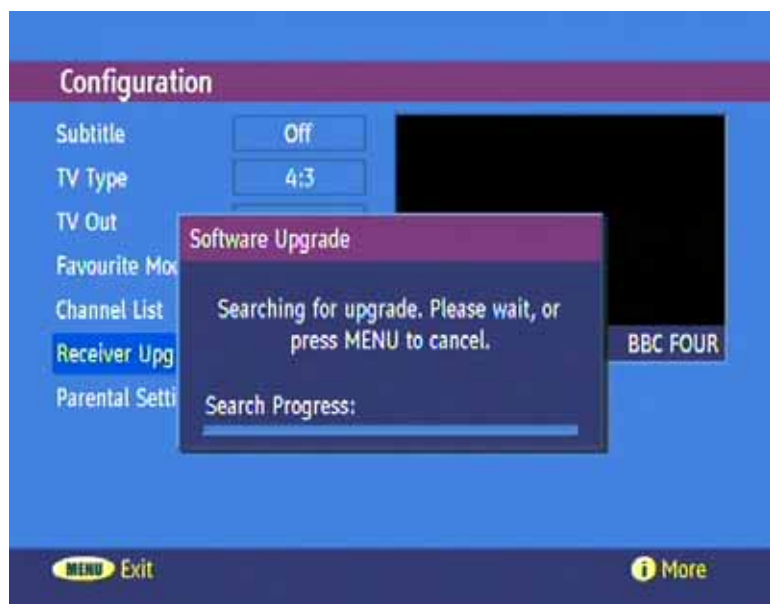

### 5.4.1.7 PARENTAL SETTINGS :

Use “▲/▼” buttons to go to Parental Settings option. Press SELECT button to enter Parental Settings Menu. A box asking for the lock key is displayed. There is only one key which is set to “0000” initially. Enter lock key. If it is incorrect, it is returned back. If it is correct, the Parental Settings Menu including following items is displayed:

 There you can set/reset locking for the Main Menu, or the Installation Menu to restrict access. If the menu lock is disabled, there will be free access to the menu system. You can change the lock key.

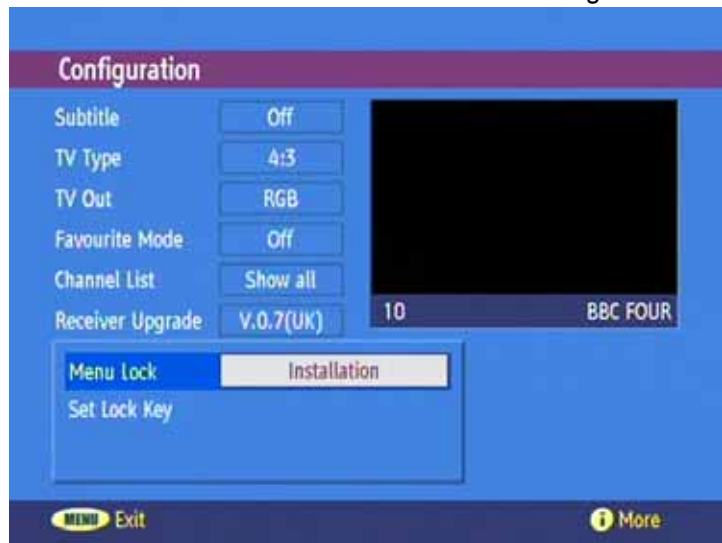

#### 5.4.1.7.i Menu Lock

Use “▲/▼” buttons to go to Lock Menu option. Use “◀/▶” buttons to toggle Menu Lock Mode.

**DISABLED** : All menus are unlocked.

**MAIN MENU** : Main Menu is accessible only with the correct lock key. So the user can't add, delete, rename, channels, can't set timers.

**INSTALLATION**: Installation menu is locked. So the user can't add channels.

Changes will be updated after exiting 'Configuration Menu'.

#### 5.4.1.7.ii Set Lock Key

Use “▲/▼” buttons to go to Set Lock Key option. Use SELECT button to enter new password. New Password Menu is displayed. Use NUMERIC buttons to enter new password. New Password is asked twice for confirmation.

If both passwords are four digits long and the same, the password is changed. It is updated after exiting the Parental Menu.



### 5.4.2 LANGUAGE

 
In this menu the user can adjust the preferred language. Language is changed by pressing SELECT key.

**System**: to alter the language press SELECT key.

**Preferred**: press SELECT to activate it. By pressing “▲/▼” highlight Audio or Subtitle Language. With “◀/▶” buttons you can set the preferred language. The chosen language will be seen in subtitles.



**Current:** via **SELECT** button current language can be changed. By pressing “▲/▼” highlight Audio or Subtitle. With “◀/▶” buttons you can set the preferred language.

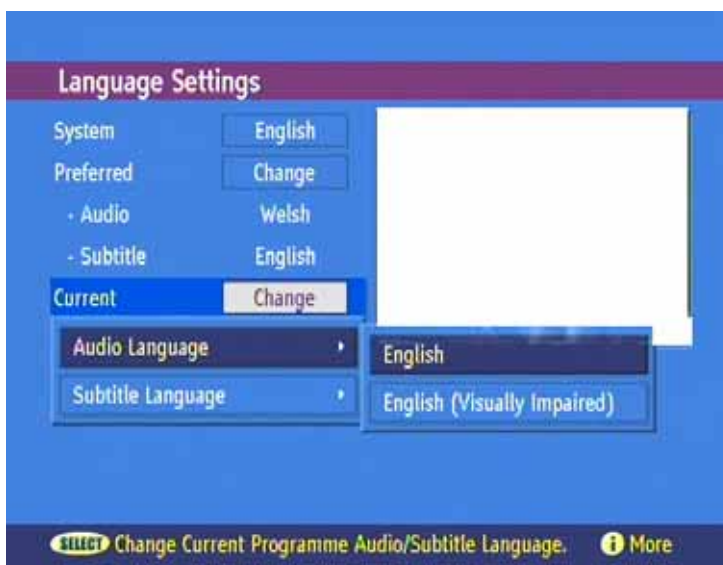


### 5.4.3 INSTALLATION

The options located in Installation Menu are:

1. Automatic Search
2. Manual Search
3. First Time Installation


 
#### 5.4.3.1 AUTOMATIC SEARCH:

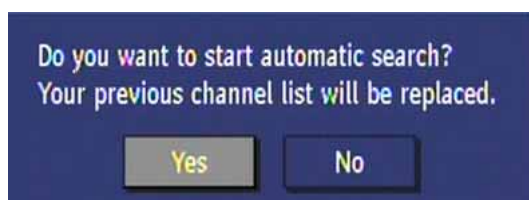


Automatic search is started by selecting YES in the auto-search pop up menu. All the multiplexes are searched and a channel table is created automatically. All channels found are stored in a sorted form with respect to their channel numbers.

#### 5.4.3.2 MANUAL SEARCH:

 In manual search the number of the multiplex is entered manually and only that multiplex is searched for the channels. In manual and auto search, any existing channel in the database is not re-stored to avoid redundant duplicates of that channel.



### 5.4.3.3 FIRST TIME INSTALLATION:

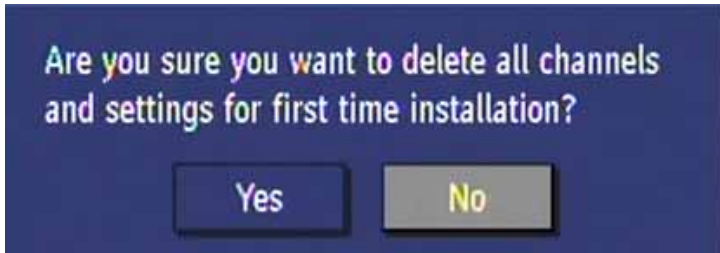

The user can use this item to load default settings, which had been loaded to the receiver at the factory. To install factory settings, highlight 'First Time Installation' menu and press SELECT key, then you will be asked to confirm for deleting all channels and settings. Selecting YES and pressing SELECT the channel table will be deleted all.

### 6.1 ELECTRONIC PROGRAM GUIDE (7- DAY - EPG) :

In no menu mode, EPG Menu is reached by pressing GUIDE key, quit by pressing MENU key. In EPG Menu all channels are displayed. Current channel is highlighted. Use “▲/▼/◀/▶” buttons to navigate.



Some, but not all, channels send information about the current and next events. Please note that event information is updated automatically. If there is no event information data available in channels, only channel names with “No Information” banner is displayed.

In EPG Menu, you can easily see the extended help information by pressing INFO key. If you highlight an event, short event description, extended event description, start and finish times of event are displayed on the screen.

If you press SELECT when a next event is highlighted, a reminder is set for the highlighted program and the border color of the box containing that event's name changes. Program reminders can be set to signal that a program is about to start when you are watching another channel. If you set reminder to a program, then you will be asked for switching to that channel when the reminder time is reached.


The starting time for EPG is the current time. You can see the event information for the next two hours. By pressing RED/ GREEN keys, you can go to the next hours, and by pressing BLUE/ YELLOW keys, you can reach the event information for the next days.





## 6.2 MESSAGES :

When the box receives no signal (e.g. the antenna cable is disconnected) , "NO SIGNAL" message is seen on the screen.

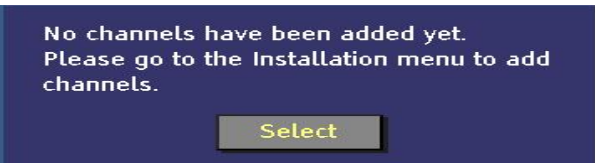

When there is no channel stored in the box, Timer Menu, Channel Table Menus are not accessible. Channel navigation is not allowed. Therefore, trying to enter these menus or do channel navigation will display "First Add new Channels!" message on the screen.

When the list menu is displayed by pressing Red key, the programs of the favourite list are displayed if the favorite mode is on. The name of the current list can be seen on the top left corner of the menu. If the favourite mode is off, a warning message is displayed.



## 6.3 CHANNEL NAVIGATION :

There are two ways to navigate through the channels:

1. Pressing P+/P- keys will help you to go to the next or the previous channel in the list.
2. Pressing a number key will activate a small digit entry window on the left upper corner of the screen. After a digit is entered, the box will wait for 2 seconds till you enter another digit. If no digit is entered during these 2 seconds, then the box will switch to the entered number channel.

If a number that is greater than the maximum number of channels is entered, the box will switch automatically to the last channel.

Each time the box switches to the desired channel, an information window is displayed on the lower part of the screen. The small bar on top right of the banner indicates the current signal quality.



On this channel info window there are

- Current event name next event name, and their start and end times.
- Program mode (TV or Radio)
- Multiplex number
- Channel number
- Name of the channel
- An icon indicating that the channel is set as favourite (if the channel is not set as favourite the field is left empty)

When the info banner is on screen, If you press "▶" button, the detailed event information for current event is displayed. If you press "◀" button, the detailed event information for next event is displayed. To close the detailed information window, press "◀" or "▶".

When switching to a locked channel (channel), lock code is requested via a window as shown in the picture. Only after the correct code is entered, it is allowed to access to this channel. To skip this channel, P+/P- cursor keys must be used.



## 6.4 VOLUME CONTROL :

When “◀” or “▶” keys are pressed, a banner is displayed, this shows the present volume level graphically. By keeping these keys pressed, the sound can be increased via “▶” key or decreased “◀” key.



When the MUTE key is pressed, mute symbol is displayed on the upper right side of the screen. The mute symbol will stay until mute is pressed again. Unless there is a menu display, the mute symbol will always be on the screen.

## 6.5 DIGITAL TELETEXT

If the watched channel possesses Teletext broadcasting you can achieve this menu by pressing TEXT button on the remote control. By means of “▲/▼, ◀/▶ YELLOW/BLUE/RED/GREEN buttons you can navigate through the menus.

## 7. TROUBLE SHOOTING GUIDE

Trouble	Possible reasons	What to do
The standby led is not lit.	Mains cable is not connected.	Check if the mains cable is plugged into the power socket.
No picture or sound.	No signal or weak signal.	Check the antenna and scart connectors
The settings you have done in the menus have not been changed.	The digital set-top box was unplugged without first going to standby.	Before unplugging your digital set-top box, wait for going to standby.
The remote control is not working.	<ul style="list-style-type: none"> <li>The digital set-top box is in standby.</li> <li>Remote control is incorrectly aimed.</li> <li>Battery exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Press the standby key</li> <li>Check if nothing blocks the front panel.</li> <li>Change the batteries.</li> </ul>
You have forgotten any channel lock code.		From Manual search menu search for that multiplex again and store them then channel lock is cancelled.

## 8. TECHNICAL SPECIFICATIONS

### 8.1 GENERAL

 
Supply Voltage	:	100 -240 V AC ~ 50 Hz (6V DC 1.5 A )
Input Frequency	:	50MHz - 858 MHz
Power consumption	:	12 W (max)
Operating temperature	:	5°C to +45°C
Storage temperature	:	-20°C to +70°C
Humidity	:	25 to 75 % rel
Physical dimensions	:	233 x 136 x 43 mm
Weight	:	616 gr

### 8.2 REMOTE CONTROL

Operating Distance	:	10m Max.
Batteries	:	2x1.5V (R-03/AAA)

### 8.3 TV SCART

Video output: Composite video signal; 1 Vp-p±3dB/75 Ω  
 Audio output: 0.5 Vrms / Z = 1kΩ  
 Function switching: 12V / 6V for 4:3 / 16:9 / Z = 10kΩ

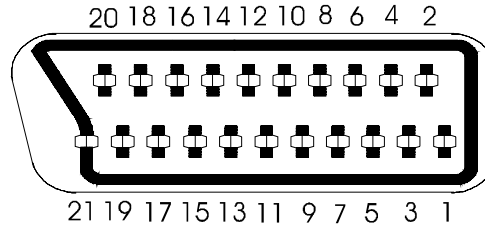

### 8.4 TV SCART SOCKET

PIN	SIGNAL	PIN	SIGNAL
1	Audio Right Output	12	TX
2	No Connection	13	GND
3	Audio Left Output	14	No Connection
4	GND	15	RED Output
5	GND	16	Fast Blanking Output
6	No Connection	17	GND
7	BLUE Output	18	GND
8	Function Switching Output	19	CVBS Output
9	GND	20	No Connection
10	RX	21	GND
11	GREEN Output		

### 8.5 VCR SCART SOCKET

PIN	SIGNAL	PIN	SIGNAL
1	Audio Right Output	12	No Connection
2	Audio Right Input	13	GND
3	Audio Left Output	14	GND
4	GND	15	No Connection
5	GND	16	No Connection
6	Audio Left Input	17	GND
7	No Connection	18	GND
8	Function Switching Input	19	CVBS Output
9	GND	20	CVBS Input
10	No Connection	21	GND
11	No Connection		

## **8.6 HARDWARE CONFIGURATION**

Main Processor	:	Sti5518
Flash Memory	:	2 Mbyte
SDRAM	:	16 Mbyte
EEPROM	:	32 KBit
Demodulator	:	STV 0360

## **8.7 WEEE**



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.