



Update to manual information

Dear Customer,

Since printing, the User manual has been updated. The amendments are as follows:

- Whilst listening to a radio channel, it is recommended that you press the **Exit** key on the remote control. This removes the channel information box at the bottom of the screen and avoids possible screen damage. Press any key to return to normal viewing.
- It is stated on pages 21 and 22 of your User Manual that there are *On Screen Display language* and *Age Censorship* options. Your digital receiver does not support these options, as these services are not currently available from the service providers.
- The User Manual states on page 22 that the master PIN can override the user PIN, however once the user chooses to change the PIN code it will become the master PIN and cannot be overridden. If this new PIN is lost or forgotten please contact Packard Bell Support on **0870 010 0484** who will be able to assist you.



Update to manual information

Dear Customer,

Since printing, the User manual has been updated. The amendments are as follows:

- Whilst listening to a radio channel, it is recommended that you press the **Exit** key on the remote control. This removes the channel information box at the bottom of the screen and avoids possible screen damage. Press any key to return to normal viewing.
- It is stated on pages 21 and 22 of your User Manual that there are *On Screen Display language* and *Age Censorship* options. Your digital receiver does not support these options, as these services are not currently available from the service providers.
- The User Manual states on page 22 that the master PIN can override the user PIN, however once the user chooses to change the PIN code it will become the master PIN and cannot be overridden. If this new PIN is lost or forgotten please contact Packard Bell Support on **0870 010 0484** who will be able to assist you.

