This guide can be used to help you re-tune the following product with the remote control below:

TX28DT4, TX32DT4

Make sure your box is on and press 80 for the BBC News channel





1) Press the Setup button





 Use the Down Arrow button to select DVB Scanning on the third line of the menu and press the Right Arrow button



The message 'All digital tuning data will be erased' will appear



3) Don't worry!
Press the OK
button





 A scanning screen will appear.
 When the scan has completed BBC1 will play out.
 No action required

		Name and Address of the Owner, where the Owner, which is the Owner, where the Owner, which is the Own	68
Service Name	Net ID	TS 10	Quality
BBC THO	12293	4100	
BBC THREE	12293	4100	
BBC NEWS	12293	4100	
BBC Red Button	12293	4100	
5 CBBC Channel	12293	4100	
	BBC TWO BBC THREE BBC NEWS BBC Red Button	BBC TWO         12293           5 BBC THREE         12293           5 BBC NEWS         12293           5 BBC Red Button         12293	8 BBC TWO         12293         4100           5 BBC THREE         12293         4100           5 BBC NEWS         12293         4100           5 BBC Red Button         12293         4100

You have completed the procedure and can continue viewing digital channels.

Manufacturer Helpline: 0844 844 3852

email: customer.care@panasonic.co.uk