

# Re-tuning: SONY Freeview TVs

11 Steps  
(Steps 1-5)

This guide can be used to help you re-tune any of the following products with the remote control below:


KDL\*S3000 - KDLS3070 series, KDL\*S4000 series,  
KDL\*D3000 series, KDL\*D3500 series,  
KDL\*P3000 - KDL\*P3020 series, KDL\*V3000 series,  
KDL\*T2800 series, KDL\*T3000 series, KDL\*U3000 series

\*Your model size appears here

**Make sure your box is on and press 80 for the BBC News channel**




- 1) Press the Menu button

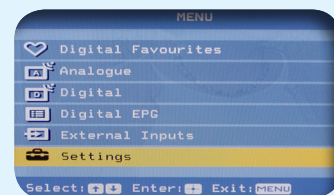


- 2) Use the Down Arrow button to select Settings on the sixth line of the menu and press the Centre button




- 3) Use the Down Arrow button to select the Toolbox icon and press the Centre button

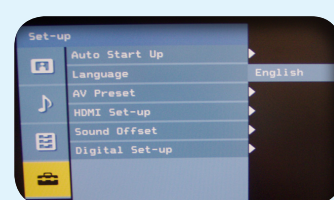

- 4) Use the Down Arrow button to select Digital Setup on the sixth line of the menu

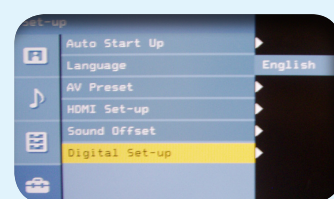

- 5) Use the Up Arrow button to select the Spanner icon and press the Centre button

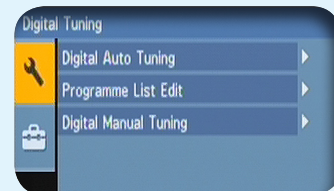

Manufacturer Helpline: 0845 6000 124


email: [Online form at www.sony.co.uk](http://www.sony.co.uk)

# Re-tuning: SONY Freeview TVs


11 Steps  
(Steps 6-11)




- 6) Select **Digital Auto Tuning** and press the **Centre** button

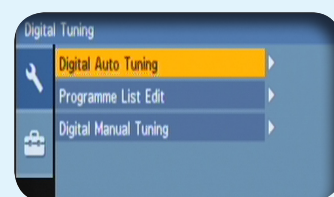



- 7) Press the **Centre** button to confirm

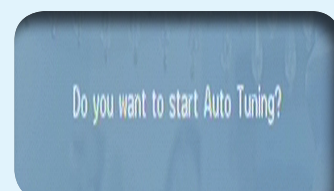


- 8) Select **Antenna** on the first line of the menu and press the **Centre** button to start tuning

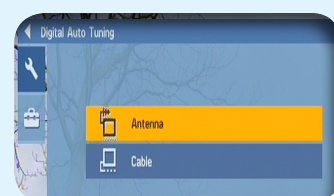


- 9) A re-tune screen will appear  
No action required

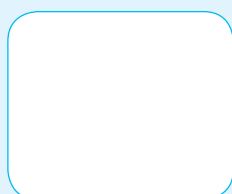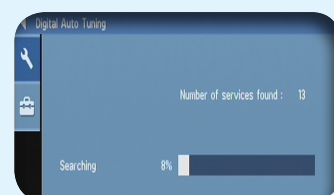

- 10) A completion screen will appear  
No action required

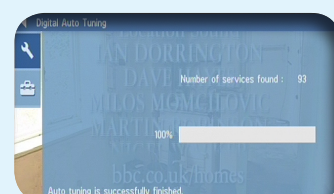

- 11) Press the **Menu** button to close the menu and view channels

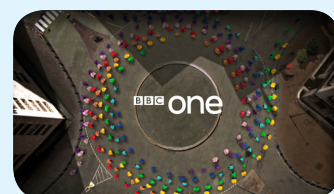

You have completed the procedure and can continue viewing digital channels.

Manufacturer Helpline: **0845 6000 124**

email: **Online form at [www.sony.co.uk](http://www.sony.co.uk)**