

Re-tuning: SONY Freeview TVs


9 Steps
(Steps 1-5)

This guide can be used to help you re-tune any of the following products with the remote control below:

KDL*E40 series, KDL*E42 series, KDL*E55 series,
KDL*V45 series, KDL*V47 series, KDL*V55 series,
KDL*V56 series, KDL*W40 series, KDL*W42 series,
KDL*W55 series, KDL*W57 series

* Your model size appears here


**Make sure your box is on and press 80
for the BBC News channel**

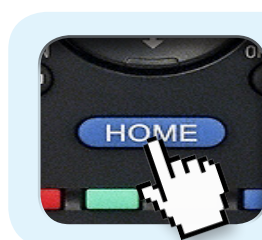


- 1) Press the Home button once





- 2) Use the Right Arrow button to select Settings and use the Down Arrow button to select Digital Set-up and press the Middle button

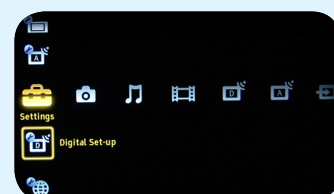


- 3) Use the Down Arrow button to select Digital Tuning on the third line of the menu and press the Middle button

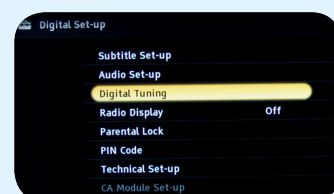

- 4) Select Digital Auto Tuning on the first line of the menu and press the Middle button

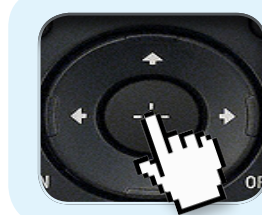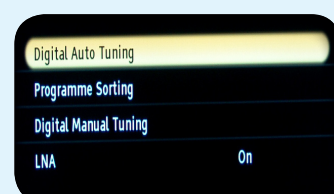

- 5) You will be asked if you want to start Auto Tuning. Use the arrow buttons to select Yes and press the Middle button

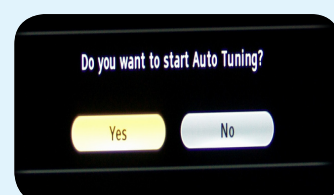

Manufacturer Helpline: 0845 6000 124


email: Online form at www.sony.co.uk

Re-tuning: SONY Freeview TVs


9 Steps
(Steps 6-9)




- 6) You will be asked to choose your TV connection. Select **Antenna** and press the **Middle** button

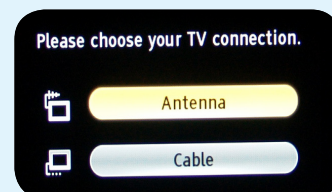

- 7) A re-tune screen will appear
No action required

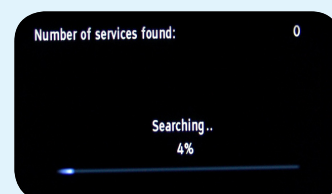

- 8) When the re-tune has completed a menu will appear with BBC1 playing out behind

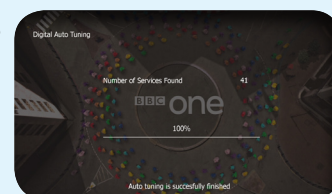

- 9) Press the Middle button to close the menu and view channels



You have completed the procedure and can continue viewing digital channels.

Manufacturer Helpline: 0845 6000 124

email: Online form at www.sony.co.uk